

Aquabot User Manual **EN**

aquabot

BWT Holding GmbH
Walter-Simmer-Str. 4, 5310
Mondsee, Austria

Designed and manufactured by Degrii Inc.
Made in China

Cordless Robotic Pool Cleaner



Vorsicht

Lesen Sie das Handbuch und befolgen Sie die Anweisungen entsprechend.
Bei unsachgemäßem Gebrauch übernimmt BWT keine Haftung für Schäden oder Verletzungen.

- 1. Dieses Gerät muss gemäß den Vorgaben installiert und betrieben werden.
- 2. Das Gerät muss so installiert werden, dass ein Mindestabstand von 20 cm zu Personen eingehalten wird und darf nicht zusammen mit einer anderen Antenne oder einem anderen Sender betrieben oder aufgestellt werden.
- 3. Gemäß den Vorschriften von Industry Canada / Europa / Australien darf dieser Funktransmitter nur mit einer Antenne betrieben werden, deren Typ und maximaler (oder geringerer) Gewinn von Industry Canada / Europa / Australien für den Transmitter genehmigt ist.
- 4. Jegliche Änderungen oder Modifikationen, die nicht ausdrücklich von der für die Einhaltung verantwortlichen Partei genehmigt wurden, können die Berechtigung des Nutzers zur Bedienung des Geräts ungültig machen.
- 5. Wenn das Gerät nicht verwendet wird, lagern Sie es bitte an einem schattigen Ort, fern von direkter Sonneneinstrahlung oder Wärmequellen. (Wir empfehlen, das Gerät nach jeder Verwendung aus dem Wasser zu nehmen.)
- 6. Reinigen Sie nach jeder Verwendung stets die Filtersiebe. Lassen Sie die Filterkörbe vor der Reinigung nicht austrocknen.
- 7. Betreiben Sie das Gerät nicht, wenn es sich nicht im Wasser befindet.
- 8. Falls Teile der Außenhülle des Roboters beschädigt sind, können die beschädigten Stellen das Risiko bergen, Ihren Pool oder die Poolfolie zu beschädigen. Bitte wenden Sie sich umgehend an den BWT-Kundendienst, um beschädigte Komponenten auszutauschen.
- 9. Verwenden Sie das Gerät unter folgenden Wasserbedingungen:

Wassertemperatur	5 - 35 °C
pH-Wert	7.0 - 7.8
Chlorgehalt	Max 4 ppm

Table of Contents

Warning	20
Warranty	21
Introduction	21
Customer Service	21
In the Box	22
Quick Setup	23
Instructions	25
Cleaning Operations	26
Care and Maintenance	27
Troubleshooting	29
Product Specification	31
FCC Statement	32
Canada Statement	33
Caution	34

Warning

1. For your safety, DO NOT do anything other than the routine cleaning and maintenance as described in this manual. This product must be serviced by a professional who is licensed and qualified in pool equipment repair as per local laws.
2. USE ONLY the original and authorized power adapter and cord to charge.
3. DO NOT use if the power cord is damaged. Before charging make sure that the connector and socket are dry and clean.
4. The device must be powered via a residual-current device with a rated residual current of at most 30 mA.
5. DO NOT attempt to charge the Aquabot when the robot is running. Make sure the power is OFF.
6. DO NOT ENTER the pool while the robot is running in the pool.
7. Improper installation and/or operation may void the warranty.
8. DO NOT use an unauthorized extension cord.
9. When it is charging, the robot should be kept in a cool place to avoid damage to internal electrical components caused by overheating.
10. To ensure optimal battery life for the product during long-term storage, it is recommended to perform a minimum of one charge cycle per month, maintaining the battery charge level between 30% to 50%.
11. Improper handling of the device can lead to severe injury or damage to the device. Only allow others to access the device after they have read and comprehended the entire manual or have been instructed about the intended use and the associated risks.
 - Never let persons with reduced physical, sensory or mental capacities (such as children or drunk people) or a lack of experience and knowledge unsupervised near the device.
 - Never allow children and persons with limited physical, sensory or mental capacities or persons lacking the respective experience and knowledge to operate the device.
 - Do not let children clean or service the device.
 - Children are not allowed to play with the device or with the power cable.
 - Do not operate the device when impaired (e.g. under the influence of drugs, alcohol or medication).
12. The robot contains a non-replaceable battery. Do not attempt to replace the battery yourself. Contact customer service for assistance if the battery needs to be replaced.

WARNING: Use only with DZ072ADL255250F battery charger.

Warranty

BEFORE INSTALLING AND USING THIS PRODUCT, PLEASE READ THE FOLLOWING GUIDELINES AND INSTRUCTIONS:

1. The warranty duration for the battery and motors is two years from your purchase date.
2. The warranty duration for the scrubbing brushes and debris filters is one year from your purchase date.
3. This warranty is valid only for the original purchaser and does not apply to resale or transfer.
4. Any damages or failures caused by misuse, unauthorized repair, disassembly, or moisture getting inside the charging contact may void the warranty.
5. Purchasing order number or official record is required to claim the repair during the warranty period.

*Find the product's serial number at the bottom side of the robot. If service is required, please contact your original dealer. If your original dealer does not perform warranty services, please find the customer service contact info.

Introduction



THANK YOU FOR CHOOSING AQUABOT

Your **Aquabot Cordless Robotic Pool Cleaner** provides an innovative and eco-friendly solution for your pool. It is equipped with two ultrasonic sensors, three motors, and debris filters to ensure efficient cleaning and intelligent navigation around your pool. It has three cleaning modes, overall, floor and wall cleaning. You can also explore new cleaning experience by using the BWT Robotics app.

Customer Service

Email: Spain sat@bwtath.es
France service@bwtpoolproducts.com
USA service@bwtpool.us
Germany poolroboterserviceDE@bwtpool.de
Austria poolroboterservice@bwt.at
Other countries ... service@bwtpoolproducts.com

In the Box

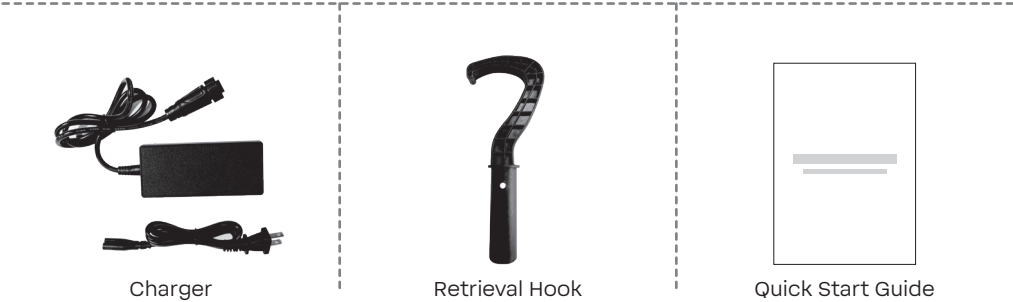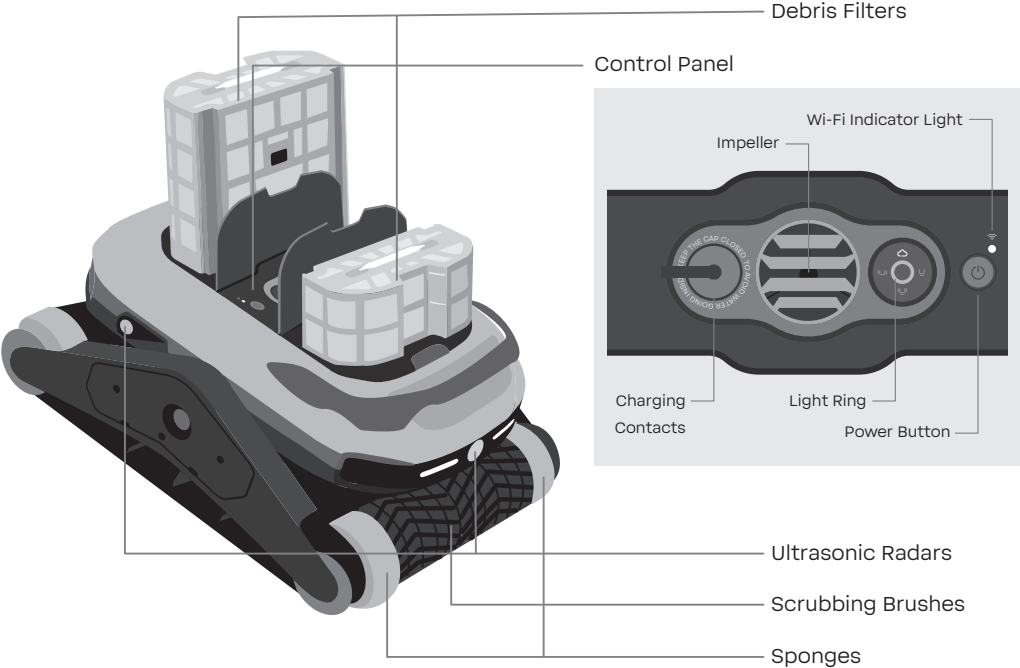

Note


The presence of water residuals or dampness in the product is a normal condition resulting from the quality testing process. Please rest assured that it is safe to use.

Quick Setup

Download the BWT Robotics App and Connect to Wi-Fi

Register or Log In

- 1. Search for "BWT Robotics" on the Apple App Store or Google Play Store, download the app, and initiate the connection to unlock customized cleaning features.
- 2. Register or log into your BWT Robotics account.

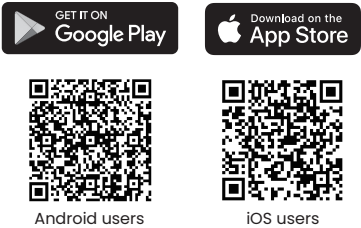

Reset Wi-Fi


- 1. If the Wi-Fi indicator light is flashing or off, it indicates the robot is waiting to be paired.
- 2. If the Wi-Fi indicator light is solid on, it indicates the robot is already connected. To reset Wi-Fi, press and hold the "⏻" button for at least 8 seconds until you see the Wi-Fi indicator starts flashing again.

Add Device

- 1. Click "+" in the upper right corner of the homepage, and select your pool robot from the list.
- 2. Make sure the Bluetooth and location services are turned on.
- 3. Connect to the home/pool Wi-Fi network, and enter the Wi-Fi password.
- 4. Enter the correct pool information and finish pairing.


Firmware Update

- 1. A Wi-Fi connected robot will receive software update notice if a new version becomes available. To check your robot's software version, click Settings > Device Information > Update.
- 2. It is recommended to enable "Auto Upgrade" for achieving optimal robot performance.
- 3. The actual app page displayed may vary due to software version updates.

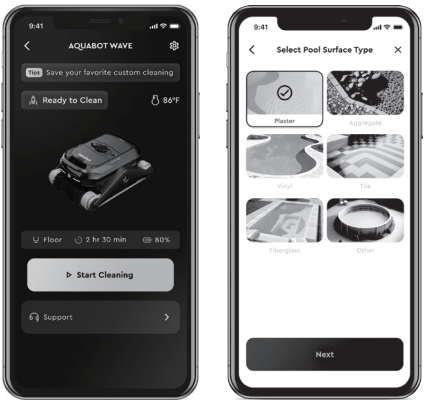


Charging



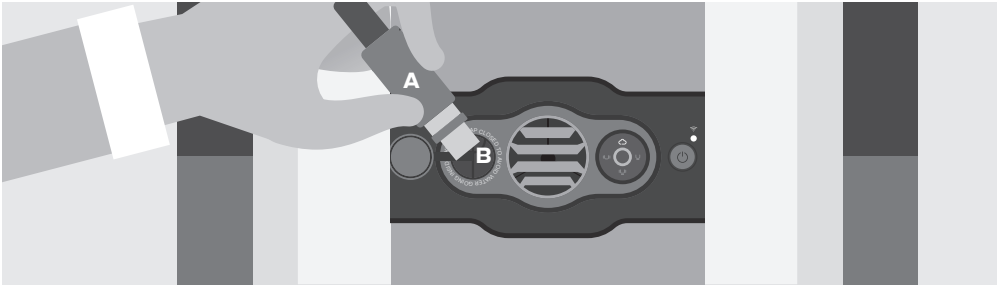

- 1. Before charging, please wipe away any water from the charging contacts. Charging the rechargeable battery in a wet or moist charging socket leads to corrosion of the contacts. Only connect the charger to the robot if the charging socket is completely dry.
- 2. Open the rubber cover of the robot, insert the charging adapter plug (A) into the charging contact (B).
- 3. Please fully charge the robot before using it for the first time.
- 4. If not in use for an extended period, it is recommended to store the robot in a cool and dry environment, above 0°C, to help preserve the battery capacity. It is recommended to store the robot with a full charge and recharge it every six months.



Light Ring

 Light Ring	Solid on		Flashing
	Green	50 ~ 100% or Fully Charged	Charging to 100%
	Yellow	25 ~ 50%	Charging to 50%
	Red	0 ~ 25%	Charging to 25%
	Blue	Cleaning starts, and you can drop the robot into the water	


Mode Explanation

	Mode	Explanation
	App control	Select your desired cleaning mode and duration, and unlock more features to customize your cleaning
	Floor mode	Runs the designated mode for 2 hours (default), and will autopark to the nearest wall when complete or when the battery level is below 10%.
	Wall mode	
	Overall mode	

Instructions

ON/OFF

Turn on/off: press and hold " ⏻ " button for 2~3 seconds to turn on/off the robot.

 Power Button	Briefly Press	Press and Hold for 2~3s	Press and Hold for 8s
	Switch cleaning modes	Turn on/off	Factory reset

Start Cleaning

Press " ⏻ " button to switch between and select the cleaning mode. When the Light Ring turns blue, the cleaning starts, and you can place the robot into the water.

Factory Reset

- 1. If the robot is not functioning properly or you need to switch Wi-Fi configurations, you can restore the robot to factory settings. Press and hold the " ⏻ " button for at least 8 seconds until the Wi-Fi indicator light starts flashing.
- 2. Please be aware that a factory reset will restore the robot to its original settings, and all personal data (including pool information, schedules, etc.) will be wiped out.


Cleaning Operations

Start Cleaning

1. For first use, please soak the sponges on both sides of the scrubbing brush for at least 5 minutes.
2. Select a cleaning mode (via the app or briefly press the power button).
3. Once the light ring turns blue, drop the robot into the pool within one minute. Ensure all the air escapes from the robot, and the device sinks to the pool floor.




Autopark

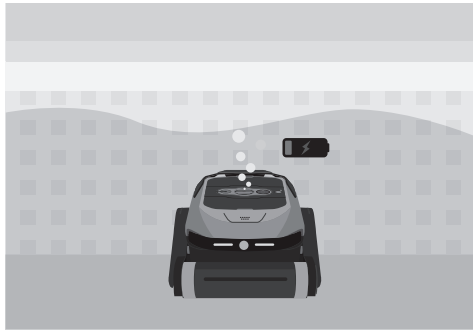

1. The robot will move to and park at the nearest edge when it completes the cleaning cycle or when the battery level goes below 10%.




3. Hold the robot vertically to drain the water out.

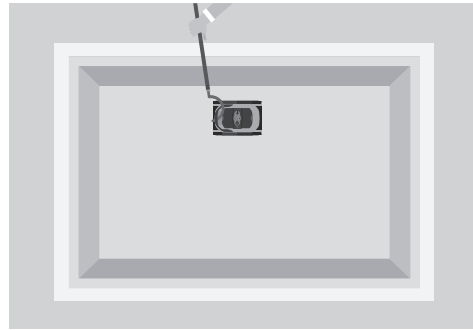


2. Use the retrieval hook to take out the robot.



4. Open the covers and remove the filters from both sides of the robot.

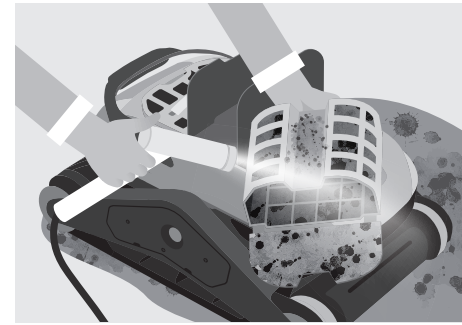

5. Empty all debris from the filter. Then rinse the filter using a hose with clean water. When it's too dirty, clean the filter with soapy water and a soft bristle brush.

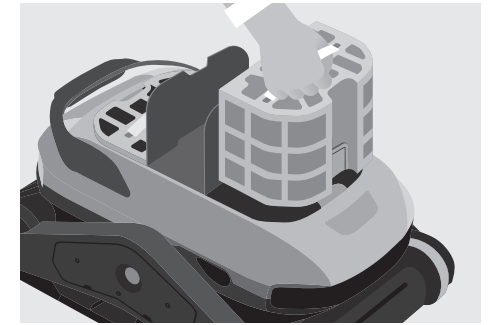


6. Install the filter in the robot and close the cover properly for your next cleaning. Put the robot in a dry place and let it dry properly. Do not put the robot under direct sunlight.

Care and Maintenance


Scrubbing Brushes (replace as needed)

1. Unscrew the old scrubbing brushes from both sides of the robot.
2. Attach the new brushes with the robot and ensure the direction of the scrubbing brushes facing the inverted V-shape.
3. Wrap the new scrubbing brushes on the roller body by buckling all the buckles one by one.

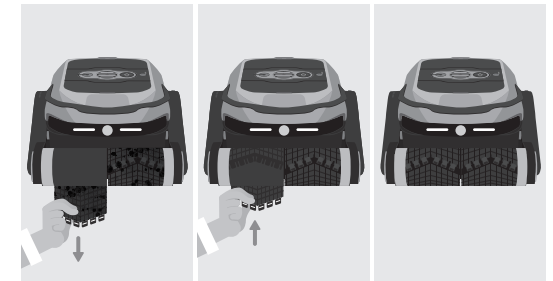


Filters (replace as needed)

1. Open the filter covers and remove the filters from both sides of the robot.
2. Insert the new filters.
3. Carefully close the filter covers.
4. It is recommended to clean the filter basket after each cleaning cycle.

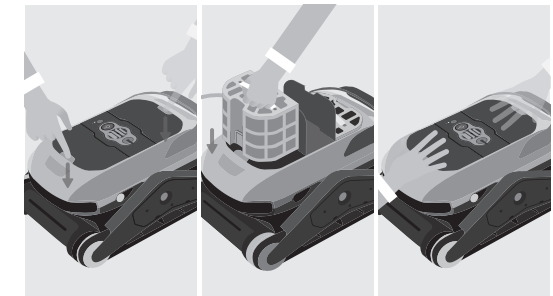

Instructions for Removing and Installing the Side Cover

1. Use a Phillips screwdriver to unscrew the three screws on the inner cover.

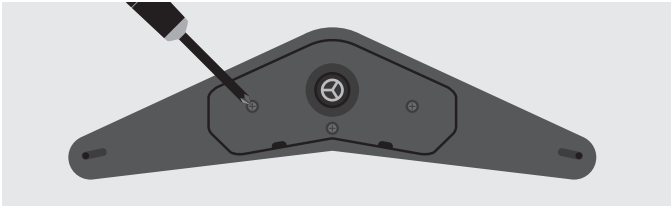


2. Use a flathead screwdriver to remove the inner cover from the bottom.




3. Remove any entangled garbage from inside the inner cover.



4. Snap the side cover onto the outer cover using the snap on the top of the inner cover.

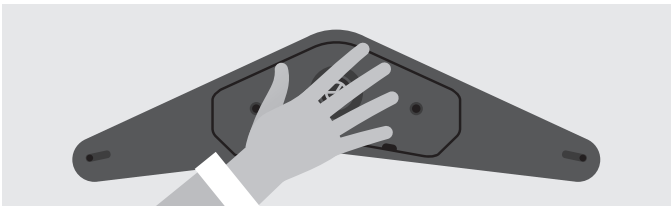

5. Use a Phillips screwdriver to lock and reattach the inner cover.

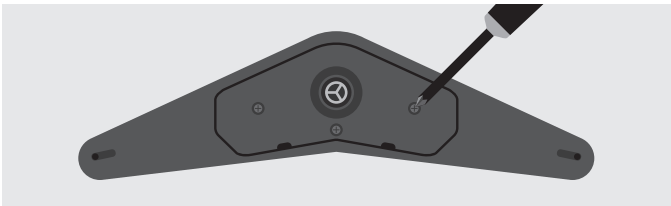

Troubleshooting

Problems	Possible Reasons	Workable Solutions
Unable to power on.	<ol style="list-style-type: none">1. Low battery.2. Battery temperature is too high or too low.3. The robot is defective.	<ol style="list-style-type: none">1. Charge the robot.2. Only use the robot within the range of 0~40 °C.3. Contact the BWT customer support team.
Unable to charge.	<ol style="list-style-type: none">1. The power outlet is malfunctioning or tripped.2. Poor contact.3. The battery temperature is too high or too low.4. You used a different charger.5. The adapter or the robot is defective.	<ol style="list-style-type: none">1. Make sure the plug is inserted into a working electrical outlet.2. Clean the charging contacts both on the robot and on the charging cord. Wipe away any water before charging.3. Only charge the robot within the range of 5~40 °C.4. Confirm that you are using the original charger.5. Contact the BWT customer support team.
Unable to connect to Wi-Fi.	<ol style="list-style-type: none">1. Weak or unstable Wi-Fi signal.2. Incorrect Wi-Fi password entered.3. Not using 2.4GHz Wi-Fi.4. The robot is already connected to a network.	<ol style="list-style-type: none">1. Ensure the Wi-Fi network is stable and has a strong signal.2. Enter the correct Wi-Fi password.3. Confirm that the robot is configured to use the 2.4GHz band for internet access.4. To reset: Turn on the robot, and press and hold the power button for 8 seconds until the Wi-Fi indicator starts flashing again.
The robot is not sinking into the water.	<ol style="list-style-type: none">1. Dry sponges.2. The filter is full or clogged.	<ol style="list-style-type: none">1. Soak the sponges on both sides of the scrubbing brush for at least 5 minutes.2. Make sure the filter is clean.3. Fully submerge the robot into the water till no air bubbles come out. Then release it to allow it to sink down.
The robot does not move and stops working after some time.	<ol style="list-style-type: none">1. Low battery.2. The robot is stuck.3. Blocked impeller.4. Obstacle impeding the wheel movement.	<ol style="list-style-type: none">1. Check that the robot has enough power to perform the action.2. Use a hook to assist in moving the robot from where it got stuck.3. Check for any obstructions in the impeller.4. Verify that the belt and wheels can move freely. Clear any obstacles that may be impeding the movement of the wheels.

Problems	Possible Reasons	Workable Solutions
The robot is moving in circles.	<ol style="list-style-type: none"> 1. The filter is full or clogged. 2. Blocked impeller. 	<ol style="list-style-type: none"> 1. Empty the filter, and clean the filter properly. 2. Check for any obstructions in the impeller.
The robot moves but does not clean the pool.	The filter is full or clogged.	Empty the filter, and clean the filter properly.
The robot gets stuck.	The robot got stuck on the drain because other pool equipment is currently in operation.	<ol style="list-style-type: none"> 1. Turn off the pool equipment while the robot is running. 2. Use a hook to assist in moving the robot from its current position.
The robot flips over.	The filter basket is full.	Make sure you emptied all the debris from the filter.
The robot doesn't reach all areas of the pool.	<ol style="list-style-type: none"> 1. Irregular pool shape 2. The pump or filter system is running. 	<ol style="list-style-type: none"> 1. Increase the cleaning time to ensure better coverage. 2. Turn off the pump and filter system.
The robot doesn't climb up the wall.	<ol style="list-style-type: none"> 1. The filter is full or clogged. 2. The brushes are worn out. 3. There is algae built up. The wall surface is too slippery. 	<ol style="list-style-type: none"> 1. Empty the filter, and clean the filter properly. 2. Replace the defective scrubbing brush. 3. Brush the algae from the wall.
The robot doesn't complete the full runtime specified in the app.	<ol style="list-style-type: none"> 1. Low battery. 2. The robot is blocked by objects or obstacles. 	<ol style="list-style-type: none"> 1. Ensure the robot's battery has sufficient power to complete the specified cleaning time. Recharge if necessary. 2. Check for any objects or obstacles that might be blocking the robot's path. Remove any impediments to allow smooth movement.
The robot is offline.	<ol style="list-style-type: none"> 1. The robot may be turned off. 2. The battery may be out of power. 3. The robot is underwater. 	<ol style="list-style-type: none"> 1. Make sure you turn on the robot . 2. Ensure the battery has enough power.

Product Specification

Cleaning Mode	Overall, Floor, Wall & Waterline
App Control	BWT Robotics App
Battery Capacity	9,300 mAh Lithium Ion
Charging Time	3~4 hours
Max Water Depth	4 m/13 ft
Power	206 W
Charging Environment Temperature	5 ~ 40 °C/41 ~ 104 °F
Storage Temperature	-10 ~ 40 °C/14 ~ 104 °F
Waterproof Level	IPX8
Charger Input	AC 100~240 V 50/60 HZ 1.5 A
Bluetooth/Wi-Fi	Yes
Temperature Sensor	Yes
Robot Dimension	55 * 42 * 23.5 cm/22 * 16 * 9 inch
Robot Weight	10.5 kg/23.2 pounds

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Canada Statement

- English:

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

This device may not cause interference.

This device must accept any interference, including interference that may cause undesired operation of the device.

The antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be collocated or operating in conjunction with any other antenna or transmitter, End-Users must be provided with transmitter operation conditions for satisfying RF exposure compliance.

- French:

Cet appareil contient des émetteurs/récepteurs exemptés de licence qui sont conformes aux flux RSS exemptés de licence de Innovation, Science et développement économique Canada. L'exploitation est soumise aux deux conditions suivantes:

Cet appareil ne doit pas causer d'interférences.

Ce dispositif doit accepter toute interférence, y compris toute interférence pouvant causer un fonctionnement indésirable du dispositif

Les antennes utilisées pour cet émetteur doivent être installées pour assurer une distance de séparation d'au moins 20 cm par rapport à toutes les personnes et ne doivent pas être localisées ou fonctionner conjointement avec d'autres antennes ou émetteurs. Les utilisateurs doivent avoir des conditions de fonctionnement de l'émetteur pour satisfaire à la conformité à l'exposition RF.